


Load Link Indicators /Operating Instructions //

1. The unit is delivered in a wooden carrying case complete with a battery/charger/transformer and either a remote display with leads or a display on the unit. When not in use, it is advisable to replace the unit in its case for protection. Where a remote is used, this should be disconnected and stored safely.
2. Before using the Load Link, check that the battery is charged. See paragraphs 8 and 9 below.
3. Ensure that the unit is of a comparable load range to the estimated load to be applied.
4. Remove the unit from the case and switch on by sliding over the on/off button situated at the rear of the unit. If a remote display is used, connect the leads to the unit and the remote display.
5. Adjust the liquid crystal display setting to zero by turning the black trimmer button at the rear of the unit. If a remote display is used, then adjust the display to zero by turning its own black trimmer button.
6. The zero setting is when all digits register '0'.
7. When this condition is obtained attach the shackles to the unit which can then be inserted into the desired lift or pulling arrangement.
8. Should the read-out appear faint, this denotes that the internal battery is running low. On the 2tonne unit (and old-style 10tonne units) "Lo Bat" will register on the read-out. On higher capacity models, dots in a vertical formation appear on the read-out. On the 10t and 20t models, they appear "0.00". on the 40t and 100t models, they appear "0:0.0".
9. To recharge the battery insert jack from battery charger output into the plug in the rear of unit. Plug input into power mains and ensure unit is switched 'OFF'. The battery will then recharge. Using the charger supplied, the battery will require charging for up to 17 hours. Use only the battery charger supplied with the Load Link.
10. On single scale units it is possible to use the battery charger as a power source and in this case the unit should be switched on with lead inserted.
11. Should the unit read "1", switch off immediately, and remove the load as quickly as is safely possible, as an overload condition is evident. Contact the Service Department before proceeding.
12. Should the unit not be able to be set at zero by using the black trimmer button, it may be that the unit required internal trimming. If so, contact the Service Department for instructions.
13. After use, ensure that the unit is switched off and stored in its case for protection. Where a remote display is used, this should be disconnected and stored safely.

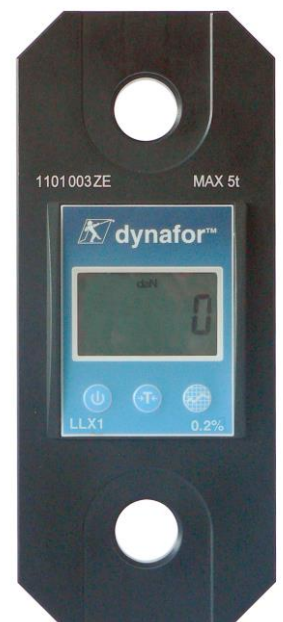

Capacities available – Up to 2.5T, 5T, 10T and 20T